

Test of the rain gauge with OHM-Meter

Created by: Support Support

Modified on: Fri, 28 Oct, 2022 at 7:07 AM


Test of the rain gauge with OHM-Meter

You need:

- OHM-Meter or a continuity tester

1. **Open the station and unplug the rain gauge** in the station

2. **Measure with the meter between the white cables and the brown cable**

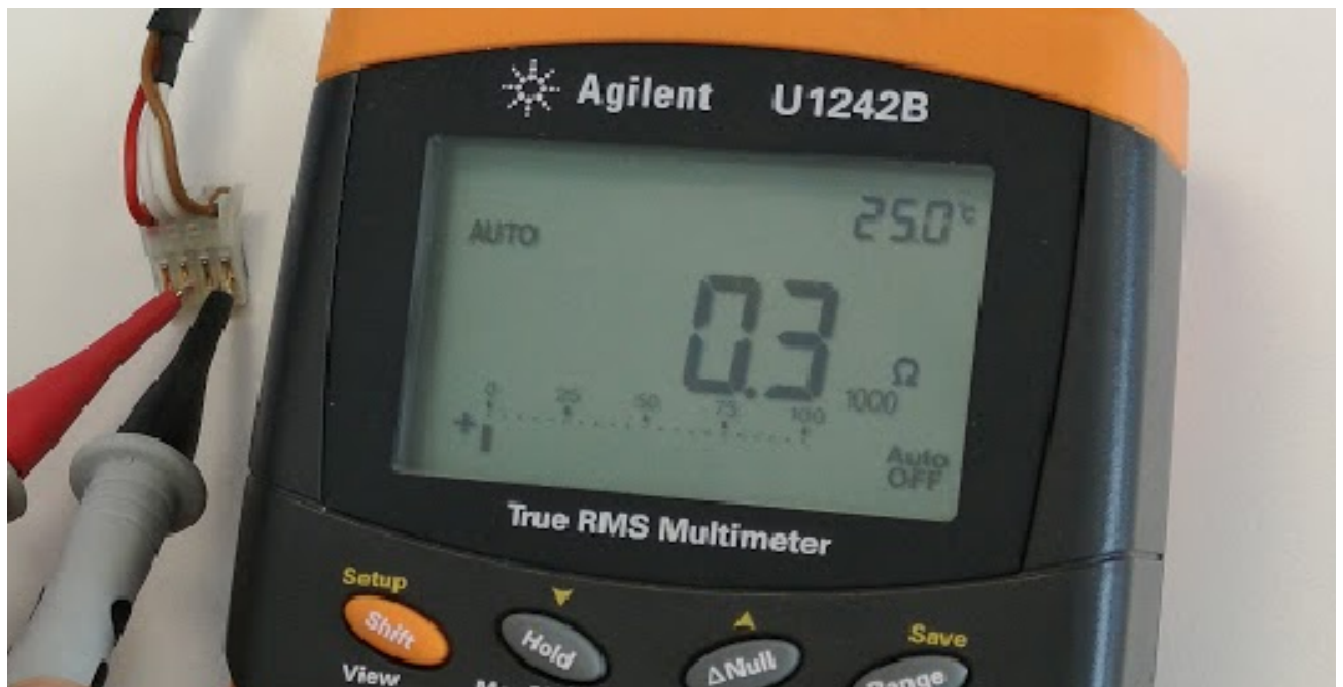

3. If the **rocker with the magnet** of the rain gauge is **on the right or left side**, the **resistance must be 0**

4. If the **indicator with the magnet** of the rain gauge is **in the middle** then the **resistance must be high** (then the contact is open)

5. If that is **not the case** try to **carefully push the cable at the rain gauge** into the screw connection. Check again.

6. If it **does not work** then please **contact us by writing a ticket**.

S Support is the author of this solution article.